


ASSEMBLY INSTRUCTIONS

Precision Pharmacy Floor Lamp
Item # KW 1062

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

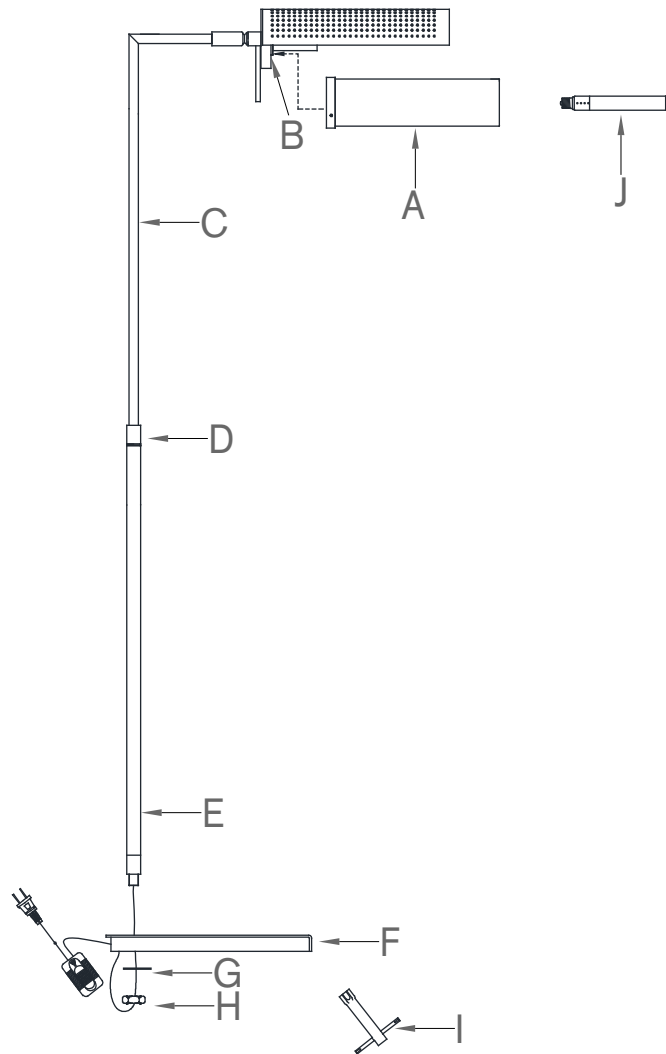

1. Carefully remove all parts from the carton.
2. Attached lamp base (F) to pole (E), letting bottom threaded rod of (E) pass through the center hole of (F). Slide the washer (G) and screw the nut (H) onto the threaded rod and tighten with T-wrench (I) provided.
3. Insert the specified light bulb (J) into socket.
4. Thread shade (A) into the shade holder (B).
5. Plug lamp into wall outlet.

ADJUSTMENT INSTRUCTION:

1. Loosen adjustment connector (D) in anti-clockwise direction.
2. Adjust lamp by pulling up or pushing down lamp pole (C) to the desired height.
3. Tighten the adjustment connector (D).

***Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.